

## The following steps must be carried out to ensure the vehicle is running properly prior to installation of the new distributor.

1. The spark plug wires should be in good condition and measured to make sure they are operating at the proper resistance. If the resistance is too high or disconnected the spark plug wires will need to be replaced.
2. If the ignition coil is an external one, check to ensure it is functional and in good operating condition.
3. Check the vehicles valve timing and make sure the timing belt is correctly installed.
4. The position of the distributor on some vehicles is very important. Please mark the position of the old distributor before removing it so that you can install the new distributor in the same position.
5. Check the vehicles ECM signal to make sure it is sending a signal to the ignition control module.
6. Check the timing of the vehicle, if it is incorrect, adjust accordingly.
7. Start the engine to check the battery voltage. If the battery voltage is over 14.5v please replace the regulator.

### Warranty Period:

1. Remanufactured products are covered by 12 months warranty unless otherwise stated.
2. New parts are covered by a manufacturers 12 month warranty unless otherwise stated.

The warranty period starts from the date of sale to the end user. If a part is repaired or replaced during the warranty period, the initial warranty period remains.

### Warranty Conditions:

During the warranty period the component is warranted against defective material and / or workmanship, provided the component is fitted and used in accordance with the manufacturer's instructions and all necessary repairs and testing to the vehicle in which the component is installed are performed prior to the installation or the component. Without limiting the foregoing, the warranty shall not apply where a defect has arisen for reasons other than faulty or defective parts or workmanship – including, but not limited to, defects arising from accidents, misuse, incorrect, improper or inappropriate operation of the component, water damage, tampering, physical damage, negligence or damage caused by vehicles modified from manufacturers specifications.

As permitted by law, the warranty extends only to, at Injectronics option, the repair or replacement of the component during the warranty period. Without limiting the foregoing, the warranty does not cover any labor costs, consequential loss or damage, injury or damage to person or property, towing charges, accommodation, loss of income or engine backfire damage.