

This instruction sheet applies to the following part numbers:

- DBC923N
- DBC919N
- DMCWIN351
- DCHY440N
- DCV8N
- DMCWIN
- DCHY318N

When removing existing points type distributor and fitting this new electronic distributor, the following instructions must be followed.

Fitting Instructions:

1. Check 12 volts supply when ignition is on.
2. Fit coil supplied or confirm a 12 volt coil is fitted

Warning: If a 12 volt coil is not fitted warranty is void & distributor will fail.

3. Disconnect battery before commencing distributor change
4. Remove original distributor and replace with RAE distributor
5. Connect black wire from distributor to the negative side of the 12 volt coil
6. Connect the original wire from ignition switch or fitted relay to the positive side of the coil
7. Connect a 12 volt wire from ignition switch or relay to the red wire on the distributor.
8. Set base timing as per vehicle specifications or performance required.

Warning:

- Remove resistor in ignition coil circuit if fitted
- Coil must have a full 12 volts supply
- Disconnect all other connections to the coil that are unused
- Always use a 12 volt HEI coil, NOT a resistor coil (8 volt)

